



HOW-TO GUIDE

TRANSCENDENT RECORDERS: LPR - IMPORT LICENSE PLATE DATA



PLEASE NOTE:

Complete User Guide, Software, Tools, and Updates are available online. Scan the QR Code or visit:
<https://vitekccctv.com>

Transcendent Recorders

Importing License plate data to Device

This guide is to help you import License plate data from a USB drive to device. To make sure data has been imported correctly, it is recommended you extract sample file from NVR.

please make sure you are using and have enabled LPR camera feature


Extracting Sample File:




Plug USB into the NVR. Go to Menu , settings, AI/Event.



Click on AI Event and select Plate Database


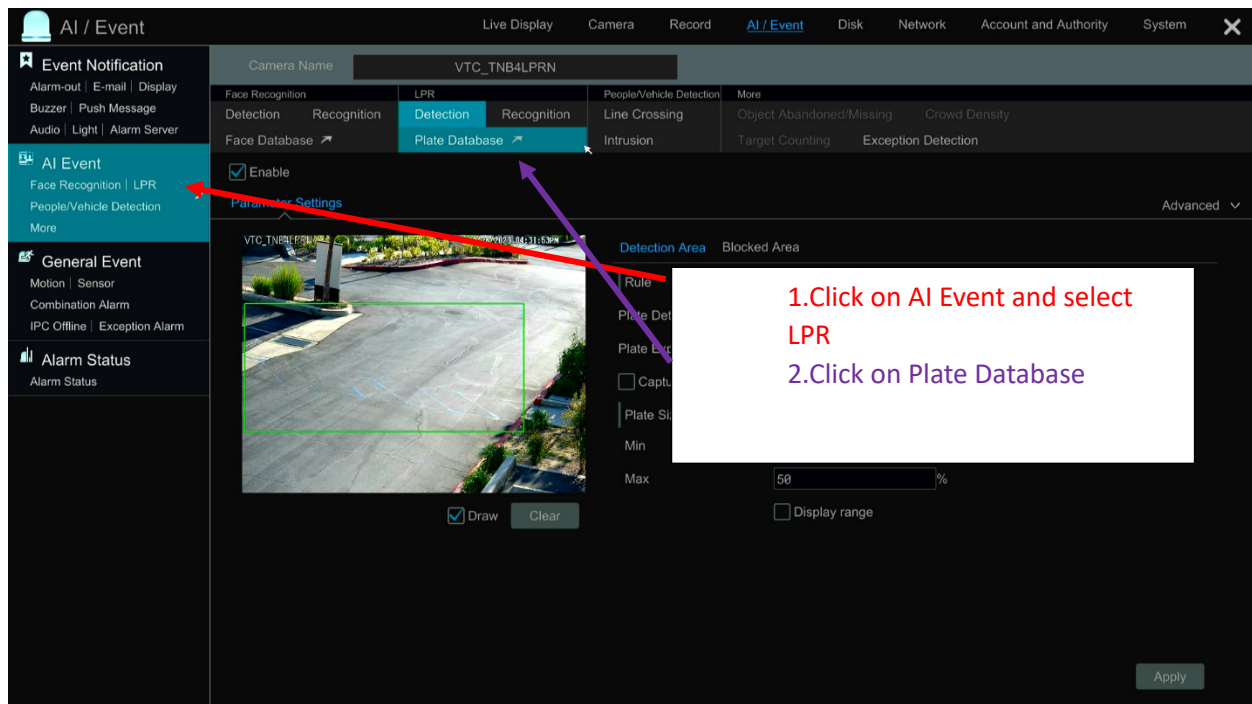


Create a Group and the ability to Import and Export should become available.

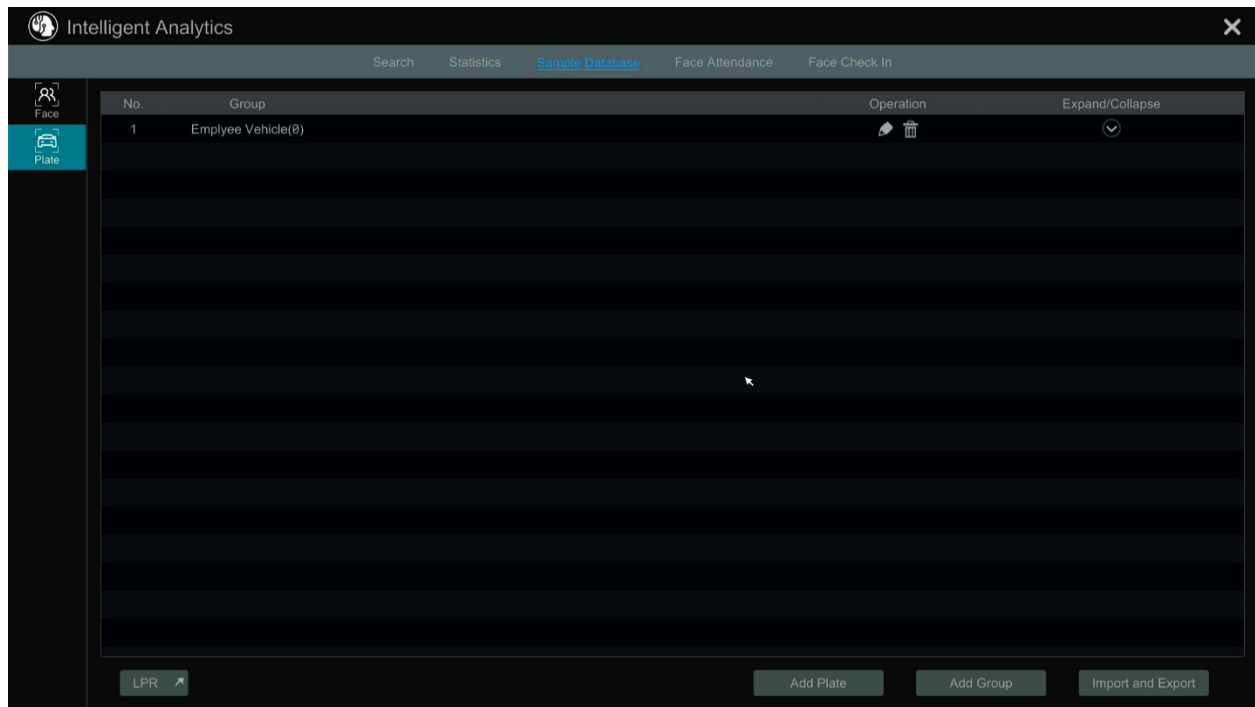


Click on "Import and Export" and Export File. File must be saved as .CSV



Please see Plate Information Description if you create your own document.

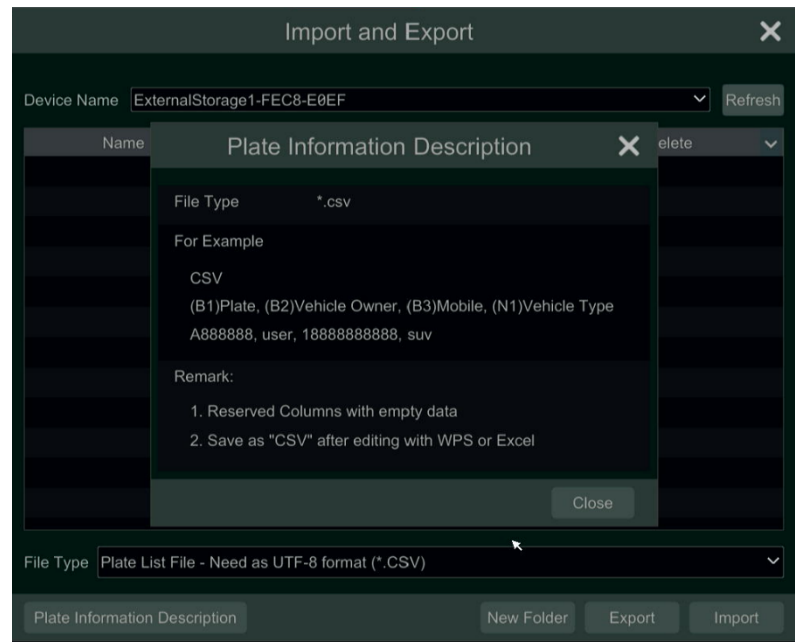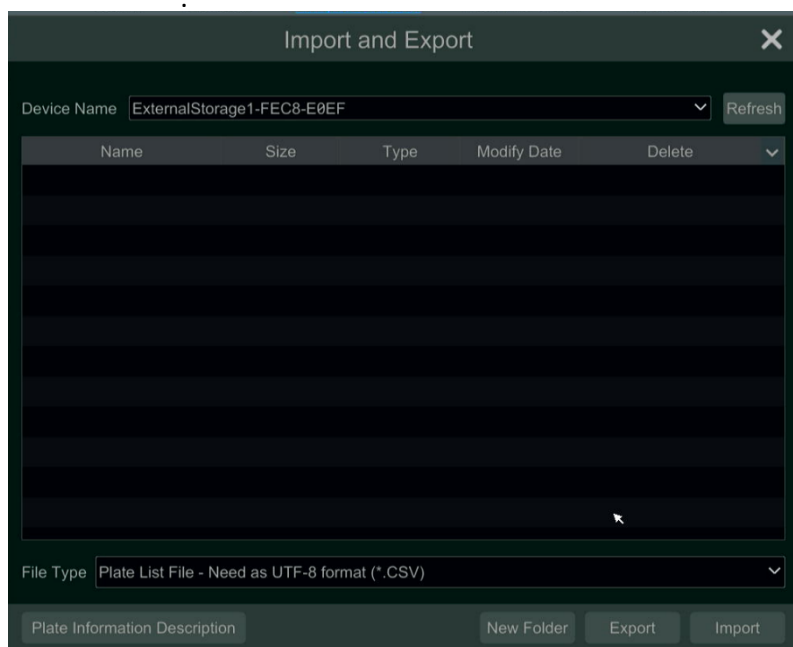

Click OK to save excel file from Device and go to computer.

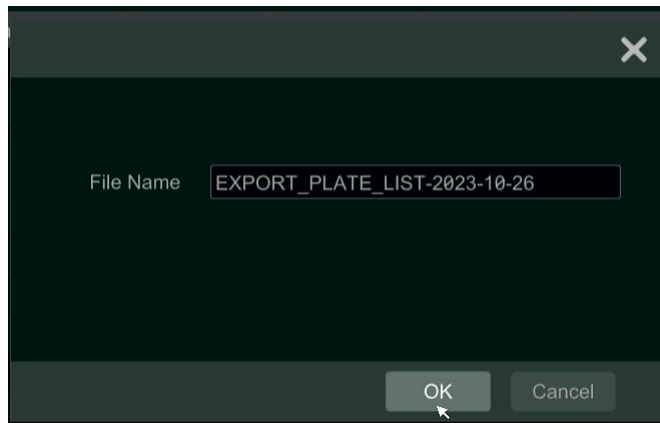


Open the .csv file (Excel) and enter information in the respected columns

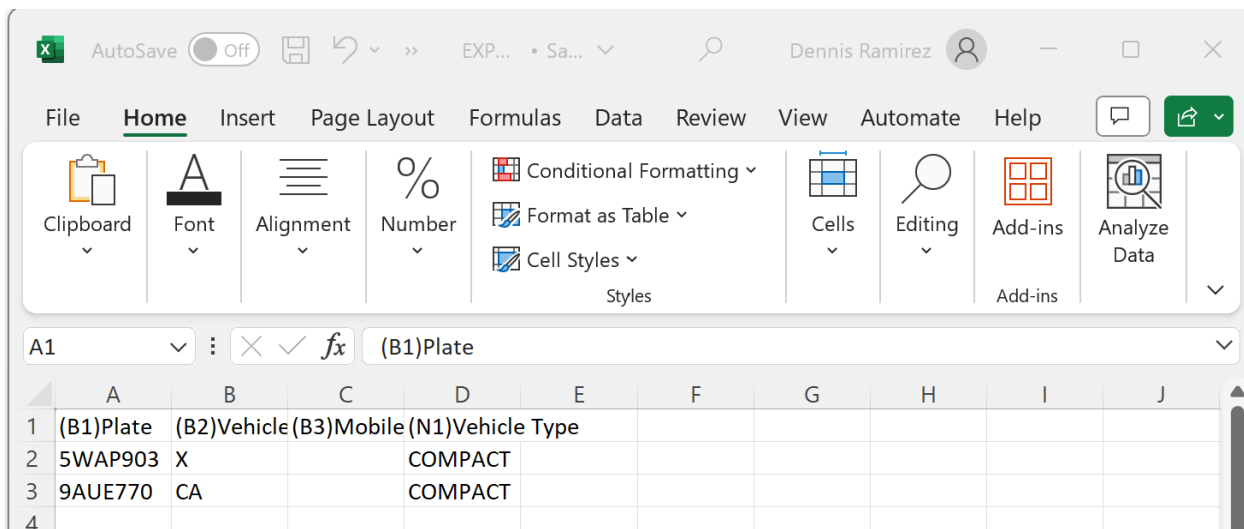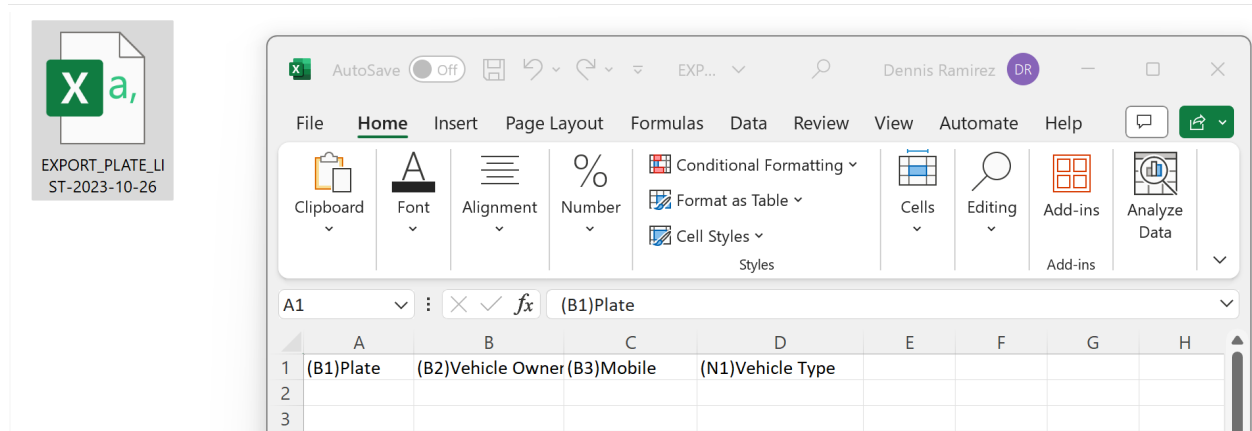


Insert USB into NVR and go to Menu, Settings, AI/Event, LPR and Plate Database.

Click on Import and Export.

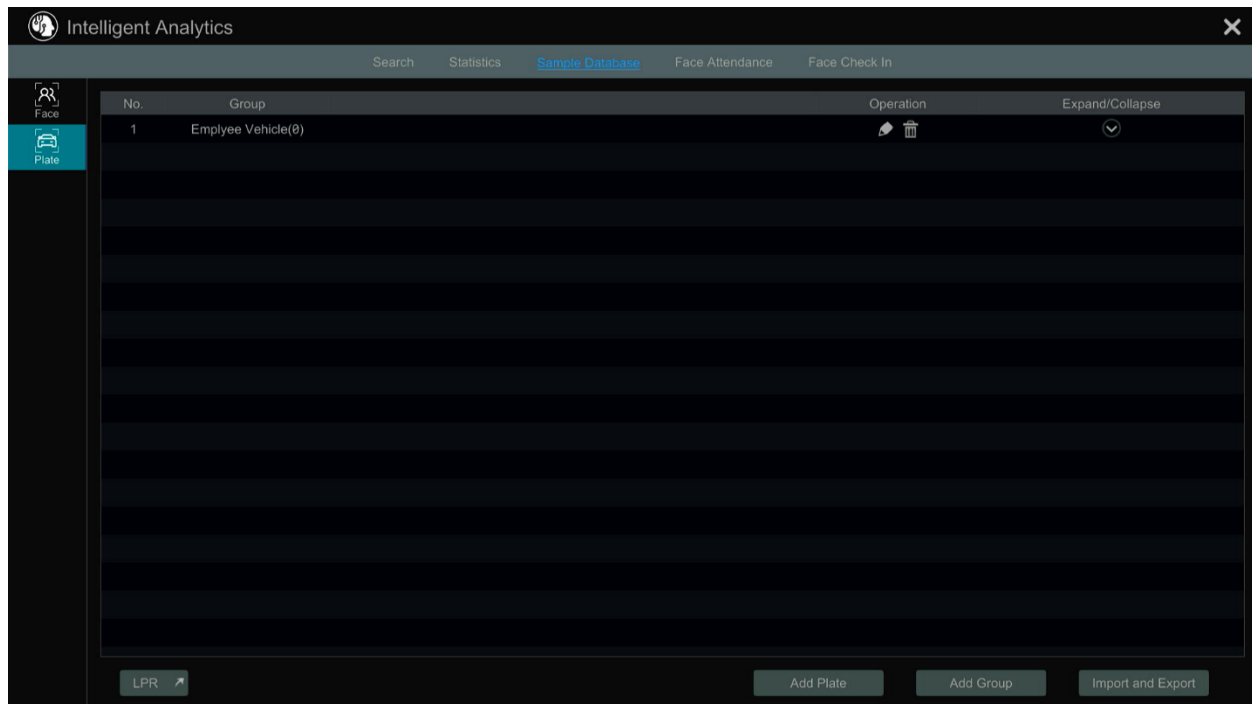


Select File and click on Import.

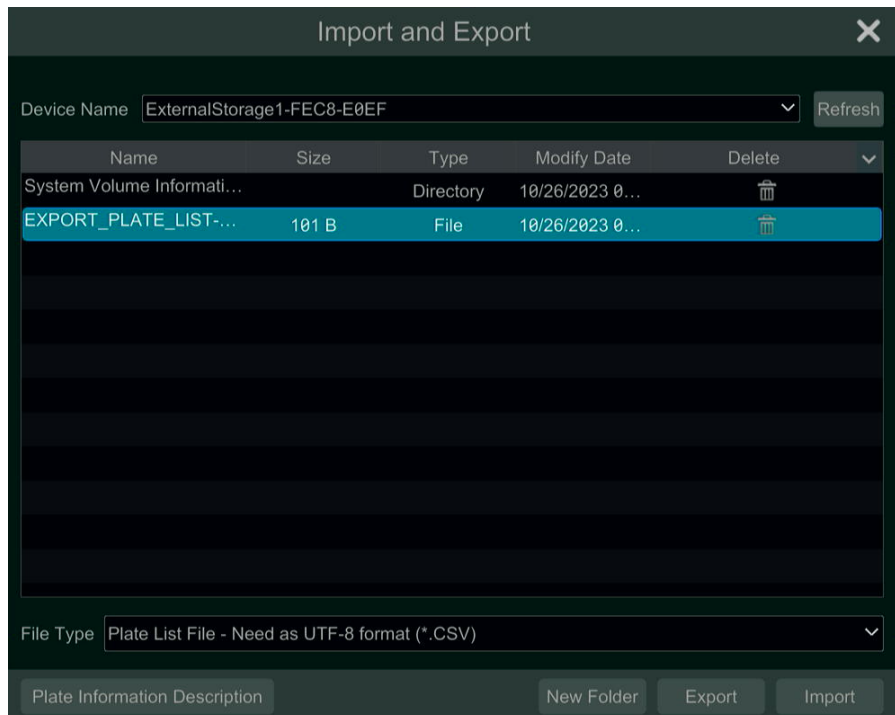

select Target Detection.



Information will now display under Target Detection

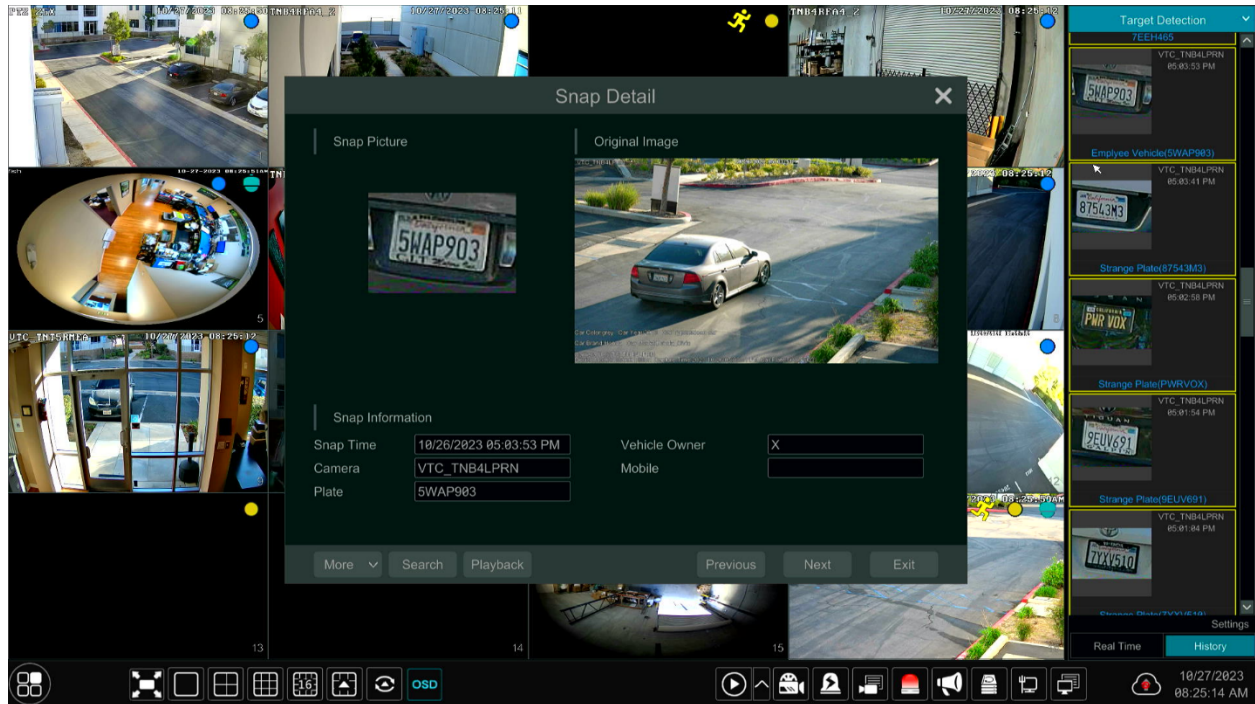

***If Target Detection Message doesn't appear go to Menu, settings, AI/Event, LPR and select Recognition.

Click and enable Plate Group and set Schedule.

Click apply when done.

