



VTD-TND4FEA-2

Transcendent Series 4 MegaPixel Fixed
IP WDR Vandal Dome Camera

QUICK START GUIDE



FEATURES:

- 1/3" 4.0 MegaPixel CMOS Image Sensor
- Up to 30fps@4MP (2560x1440)
- 2.8mm Fixed Iris Lens
- Dual Illumination with Matrix IR and Knight Guard white light (up to 100' Range)
- True Wide Dynamic Range (120dB)
- True Mechanical Day/Night function by ICR
- XD-DNR (3D & 2D-DNR) Noise Reduction
- Region Intrusion Detection, Object Abandoned / Missing, Scene Change Detection, Line Crossing, Video Blur, Video Color Cast Detection
- H.265+ / H.265 / H.264+ / H.264 / MJPEG
- MicroSD Card Slot for Local Recording (Up to 256GB)
- 1 Ch. Audio In + Built-in Mic*
- IP67 Weather Resistance + IK10 Impact Protection
- Wall Mount, J-Box, Pendant, and Semi-Flush Mount, and Adapters Available
See Additional Mounting Options on Pg. 9
- 12VDC & PoE (Power over Ethernet) Operation
- 3-Year Warranty



PLEASE NOTE:

Complete User Guide, Software, Tools, and Updates are available online. Scan the QR Code or visit:
<http://www.vitekccv.com/Downloads>

*Please research local, state and federal laws regarding the implementation of audio surveillance.

Components and Accessories



Camera



Quick Start Guide



4 Tapping Screws PA 4 x 2



Rubber Plug



Allen Wrench



Drill template




Plastic plug x 4



Weather Proof Connector


Overview

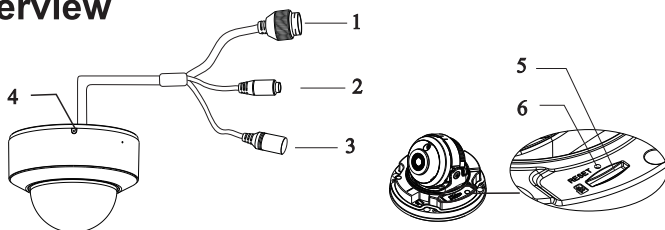

- | | |
|-------------------------|----------------------|
| 1 Ethernet connector | 4 Microphone |
| 2 Audio input connector | 5 Micro SD Card Slot |
| 3 Power connector | 6 Reset |

Cable Connections


First connect the weather resistant cap to an ethernet patch cable, then connect the cameras ethernet adaptor. If not powering the camera with PoE, also connect the power Cable to an approved 12VDC power supply.

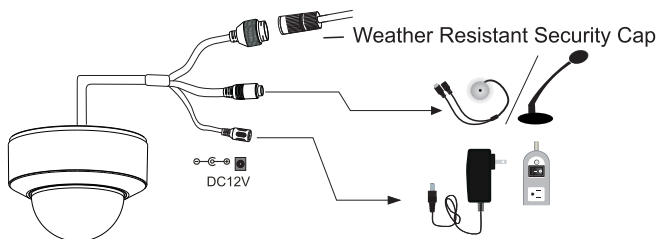

Installation

Before beginning installation, make sure that the wall or ceiling is strong enough to withstand 3 times the weight of the camera. Do not leave the dome cover open for more time than needed (<4hrs). Do not remove the protective plastic film until after the installation is complete.


1. Attach the drill template to the place where you want to install the camera, then drill the screw holes and 1 cable hole according to the drill template.

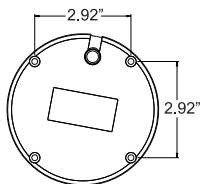


- 1A. Rotate the trim ring counterclockwise to remove.



2. Loosen the screws to open the lower dome and then loosen the lock screw to remove the mounting base.

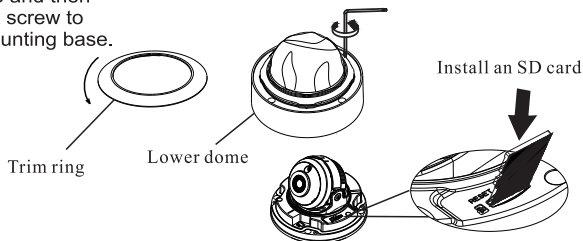


CONNECTING THE NETWORK CABLE

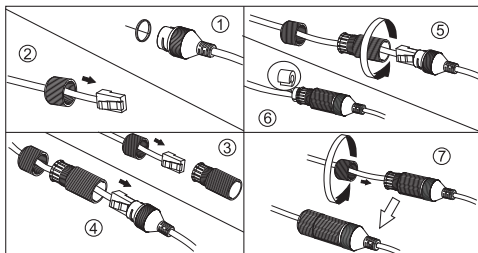


If the RJ45 Connector of the network cable has a jack and cannot be threaded through the kit, remove the jacket. If the jacket cannot be removed, cut off the connector and install an RJ45 connector without a jacket.


3. Route the cables and connect the power & video cables, use the rubber plug to fill the gap of the mounting base, then secure the mounting base to the ceiling or wall with screws.

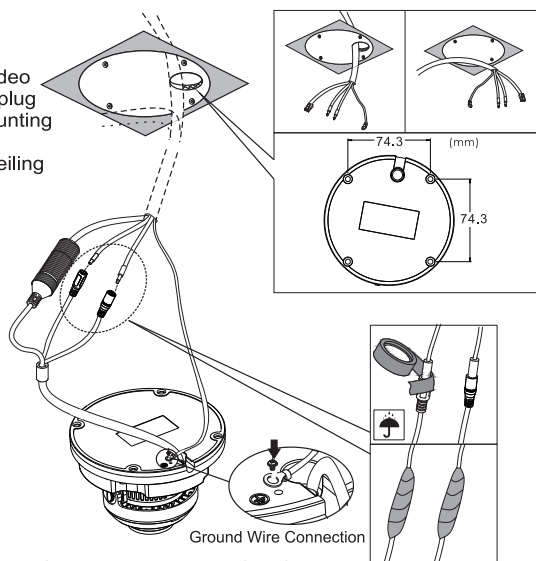


4. Before adjusting the three-axis camera mount, preview the camera on a monitor, then adjust as necessary achieve the optimum viewing angle.

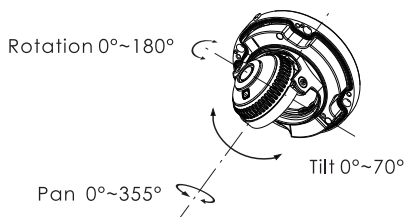

5. Install the lower dome on the camera with the included screws, then put the trim ring back on the lower dome and rotate clockwise until it locks.

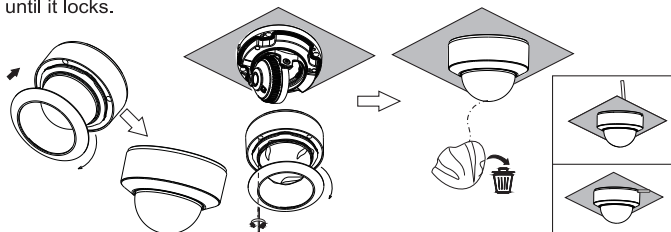


LAN Configuration

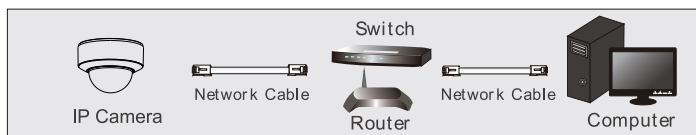

The camera can be accessed on the local network either using the IP-Tool or directly in a web browser.

Accessing the Camera Using the IP-Tool

1. Make sure the camera and PC are connected to the LAN.
2. Locate the IP-Tool installer at www.vitekctv.com/Downloads/Software/Transcendent-IPTool_v2.0.2.zip, then install on the PC. Open the installed application.

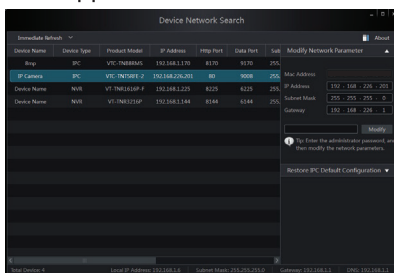


3. Modify the IP address. The default IP address is 192.168.226.201. Click the information of the camera listed in the above table to show the network information on the right side. Modify the IP address and gateway of the camera and make sure its network address is in the same local network segment as the computer's. Please modify the IP address of your device according to the practical situation.

For example, the IP address of your computer is 192.168.13.4. So the IP address of the camera shall be changed to 192.168.13.X. After modification, please input the password of the administrator and click "Modify" button to modify the setting.

Mac Address: []
IP Address: [192.168.226.201]
Subnet Mask: [255.255.255.0]
Gateway: [192.168.226.1]
[] Modify

** Default admin password: "123456".

4. Double-click the IP address and then the system will pop up the web browser to connect IP-CAM. Edge in IE mode / IE browser will download the Active X. control. After downloading, a login window will pop up as shown below:

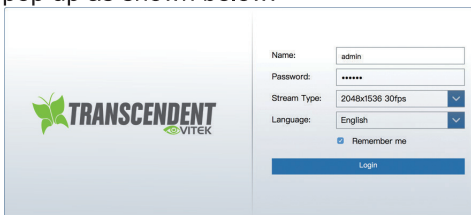

The image shows a login window for a Transcendent VITEK IP camera. On the left is the Transcendent VITEK logo. On the right is a form with the following fields: Name (admin), Password (*****), Stream Type (2048x1536 30fps), and Language (English). There is a 'Remember me' checkbox and a 'Login' button at the bottom.

Input the user name and password to log in.

Default user name: admin / Default password: 123456.

Directly Access Through a Web Browser

The default network settings are as shown below:

IP address: 192.168.226.201 HTTP: 80


Subnet Mask: 255.255.255.0 Data Port: 9008

Gateway: 192.168.226.1

You may use the above default settings when you log in the camera for the first time.

1. Manually set the IP address of the PC. The network segment should be the same as the default settings of IP-CAM. Open the network and share center. Click “Local Area Connection” to pop up the following window.

Select “Properties” and then select Internet protocol according to the actual situation (for example: IPV4). Next, click “Properties” button to set the network of the PC.

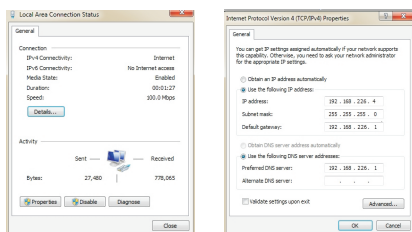

2. Open Edge in IE mode / IE browser and input the default address of IP-CAM and confirm. Edge in IE mode / IE browser will download an Active X control.
3. After downloading the Active X control, the login dialog box will appear.
4. Input the default username and password and then enter to view.

WAN Configuration

Access the camera by the router or virtual server for example.

1. Make sure the camera is connected to the LAN; Then log into the camera via LAN and go to System Config→Network Config→Port menu to set up the port number.
2. Enter System Config→Network Config→IP Address menu to modify the IP address.

Port	Server	DDNS	SNMP	802.1X	RTSP	UPn
HTTP Port	80					
HTTPS Port	443					
Data Port	9008					
RTSP Port	554					
Save						

3. Go to the router's management interface through IE browser to forward the IP address and port of IP-CAM in the "Virtual Server".

Port Range					
Application	Start	End	Protocol	IP Address	Enable
1	9008	to 9008	Both	192.168.6.6	☒
2	80	to 81	Both	192.168.6.6	☒
3	10000	to 10001	Both	192.168.6.166	☐
4	21000	to 21001	Both	192.168.6.156	☐
5	7777	to 7778	Both	192.168.6.206	☐
6	1029	to 1030	Both	192.168.6.207	☐

4. Open the web browser and input its WAN IP and HTTP port to access the IP-CAM.
5. For additional setup, features and functions, please scan the QR code on the front page of this quick guide and download the complete manual.

DETAILED SPECIFICATIONS - VTD-TND4FEA-2



Image Sensor	1/3" CMOS
Image Size	2560×1440
Electronic Shutter	1/1s ~ 1/100000s
Iris Type	Fixed Iris
Min. Illumination	0.005 lux @F1.6, AGC On, 0 lux with illumination on
Lens	2.8mm
Field Of View	Horizontal FoV: 94°, Vertical FoV:50°, Diagonal FoV:115°
Supplemental Light Range	IR range: up to 100', White light range: up to 100'
Day & Night	ICR
Wide Dynamic Range	120dB
BLC	Yes
HLC	Yes
Digital NR	Yes
S/N Ratio	50dB
Angle Adjustment	Pan: 0°~355°; Tilt:0°~70°;Rotation: 0°~180°
Video Compression	Main stream: H.265+ / H.265 / H.264+ / H.264, Sub /Third stream: H.265+ / H.265 / H.264+ / H.2
H.265 Compression Standard	Main Profile@Leve4.1 High Tier
Resolution	4MP (2560×1440), 1080P (1920×1080), 720P (1280×720), D1, VGA (640× 480), CIF (480×240)
Main Stream	60Hz: 4MP/1080P (1~30fps) 50Hz: 4MP/1080P (1~25fps)
Sub Stream	720P/D1/VGA/CIF (60Hz: 1~30fps; 50Hz: 1~25fps)
Third Stream	D1/480× 240/CIF (60Hz: 1~30fps; 50Hz: 1~25fps)
Bit Rate	64 Kbps ~ 6Mbps
Bit Rate Type	VBR / CBR
Image Settings	ROI, Saturation, Brightness, Hue, Contrast, Wide Dynamic, Sharpness, Image Mirror, Image Flip, NR, through client software or web browser
Audio Compression	G711A/U
ROI	Each ROI to be configured separately
Network	RJ45
CVBS	No



DETAILED SPECS CONT'D - VTD-TND4FEA-2



Audio	1CH audio input, 1CH built-in MIC*
Storage	Built-in micro SD card slot, up to 256GB
Reset	Yes
Remote Monitoring	Web browser / Transcendent NVR / VMS / Mobile App
Web Browser	Chrome 89.0+ / Edge 89.0+ / Firefox 87.0+ / Safari 14.0+
Online Connection	Supports simultaneous monitoring for up to 6 users, Support multi-stream real time transmission
Network Protocol	UDP, IPv4, IPv6, DHCP, NTP, RTSP, RTP, RTCP, RTMP, PPPoE, DDNS, SMTP, FTP, 802.1x, SNMP, UPnP, HTTP, HTTPS, HTTP POST, P2P, QoS
Interface Protocol	ONVIF
Smart Alarm	Motion detection, SMD, SD card error, SD card full, IP address conflict, network disconnection, video exception
Programmable Analytics	Line crossing / Region Intrusion Detection (by human / vehicle classification), Object Abandoned / Missing, Scene Change Detection, Video Blur, Video Color Cast Detection
More Features	Watermark, IP address filtering, video mask, heartbeat, ANR, cloud upgrade, smart supplement light, corridor pattern
PoE	Yes (IEEE802.3af)
Ingress / Impact Protection	IP67 Weather Protection + IK10 Impact Rating
Security	Video encryption, firmware encryption, HTTPS encryption, configuration encryption, illegal login lock, IP address filtering, 802.1x authentication, basic and digest authentication for HTTP/RTSP
DORI	Detect: 203ft (62m) / Observe: 81ft (25m) / Recognize: 40ft (12m) / Identify: 20ft (6m)
Power Supply	DC12V/PoE
Power Consumption	<5.5W
Operating Conditions	-22°F~140°F (-30°C ~ 60°C), Humidity: less than 95 % (non-condensing)
Installation	Ceiling mounting, wall mounting - see page 1
Certificates	CE, FCC
Environmental Protection	Complies with Directive EU RoHS, WEEE(2012/19/EU) , directive 94/62/EC and REACH(EC1907/2006)
Dimensions	Ø4.69 x 3.44" (119 x 87.4mm)
Weight (Net, Gross)	1.65lbs / 24.46oz / .75kg, 1.87lbs / 29.98oz / .85kg

BREAKDOWN OF MODEL NUMBERS EXAMPLE: VTD-TND4FEA-2

[VTD]	[T]	[N]	[D]	[4]	[F]	[E]	[A]	[I-2]
VITEK	TRANSCENDENT	Network	Vandal	4MP	Fixed Lens	Entry	Second	2.8mm
DOME			Dome			Level	Iteration	Lens

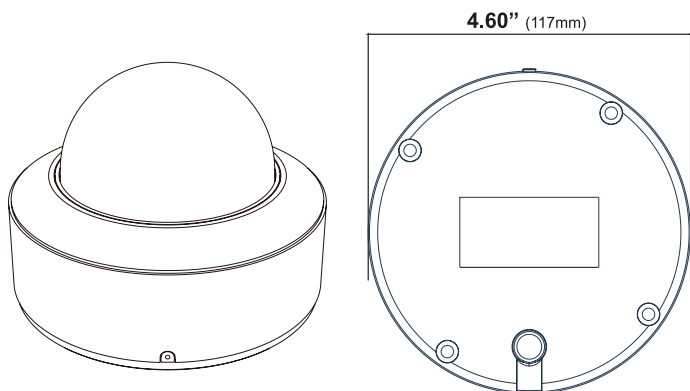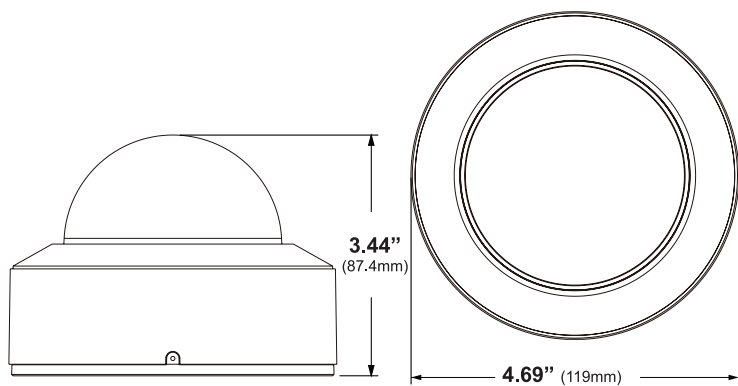



OPTIONAL ACCESSORIES FOR VTD-TND4FEA-2





VT-TJB03A
Optional Junction box for
Cable Management



VT-TPDM-1
Pendant Mount
(VT-TJB03A Req)



VT-TWMT3
Wall Mount

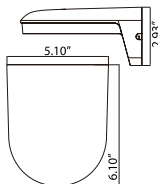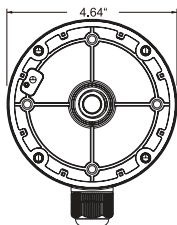




VT-TFMT-S
In-ceiling Semi-flush Mount



VT-TPLMT
Universal Pole Mount
Adapter (VT-TJB03A Req)



VT-TCNMT
Universal Corner Mount
Adapter (VT-TJB03A Req)

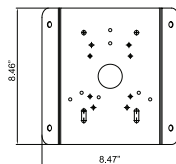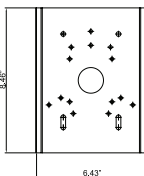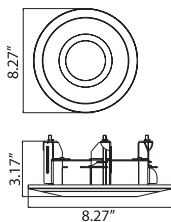

LIMITED PRODUCT WARRANTY

VITEK products carry a three (3) year limited warranty. VITEK warrants to the purchaser that products manufactured by VITEK are free of any rightful claim of infringement or the like, and when used in the manner intended, will be free of defects in materials and workmanship for a period of three (3) years, or as otherwise stated above, from the date of purchase by the end user. This warranty is nontransferable and extends only to the original buyer or end user customer of a VITEK Authorized Reseller.

The product must have been used only for its intended purpose, and not been subjected to damage by misuse, willful or accidental damage, caused by excessive voltage or lightning.

The product must not have been tampered with in any way or the guarantee will be considered null and void.

This guarantee does not affect your statutory rights.

Contact your local VITEK Reseller should servicing become necessary.

VITEK makes no warranty or guarantee whatsoever with respect to products sold or purchased through unauthorized sales channels. Warranty support is available only if product is purchased through a VITEK Authorized Reseller.



28492 CONSTELLATION ROAD VALENCIA, CA 91355
WWW.VITEKCCTV.COM

Version 1.1
06/2025